


# E4-WM5-Y326A00 MOUNTING INSTRUCTION

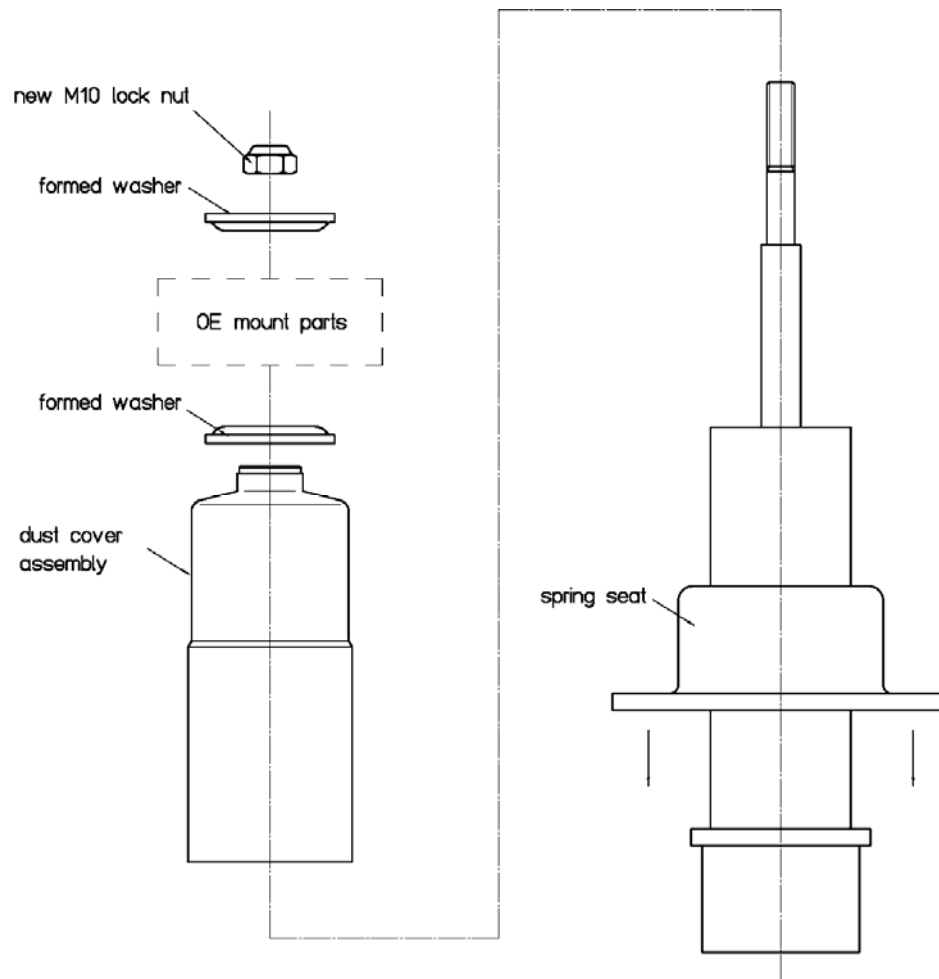

**Refer to vehicle service manual for removal and installation of the front shock absorber. Refer to the diagram above for assembly of shock absorber only,**

1. Remove dust cover assembly from shock (do not remove the metal insert)
2. Install spring seat as shown.
3. Re-install dust cover. Install one formed washer as shown.
4. Re-install OE upper mount parts
5. Install second formed washer as shown. Install new lock nut and tighten to 25 Nm (19 lb/ft).

## **IMPORTANT!**

Installation of shock absorbers requires special tools and expert knowledge. Accordingly, installation of all BILSTEIN products must be performed by a qualified suspension specialist.

Always use a chassis hoist for the installation of BILSTEIN products and make certain that the raised vehicle is securely attached to the hoist and/or supported to prevent the vehicle from slipping, falling, or moving during the installation process.

**If you choose to install any BILSTEIN product without the necessary special tools, expertise or chassis hoist, you may subject yourself to the risk of serious bodily injury or death.** If you elect not to use a chassis hoist, at least make sure the vehicle is on level ground, that all tires on the ground during installation are blocked to prevent movement, that at least two tires are on the ground at all times, and that adequately secured safety stands (jack stands) are used to support the chassis. **NEVER** get under the vehicle until you have checked to make sure all of these steps are performed.